



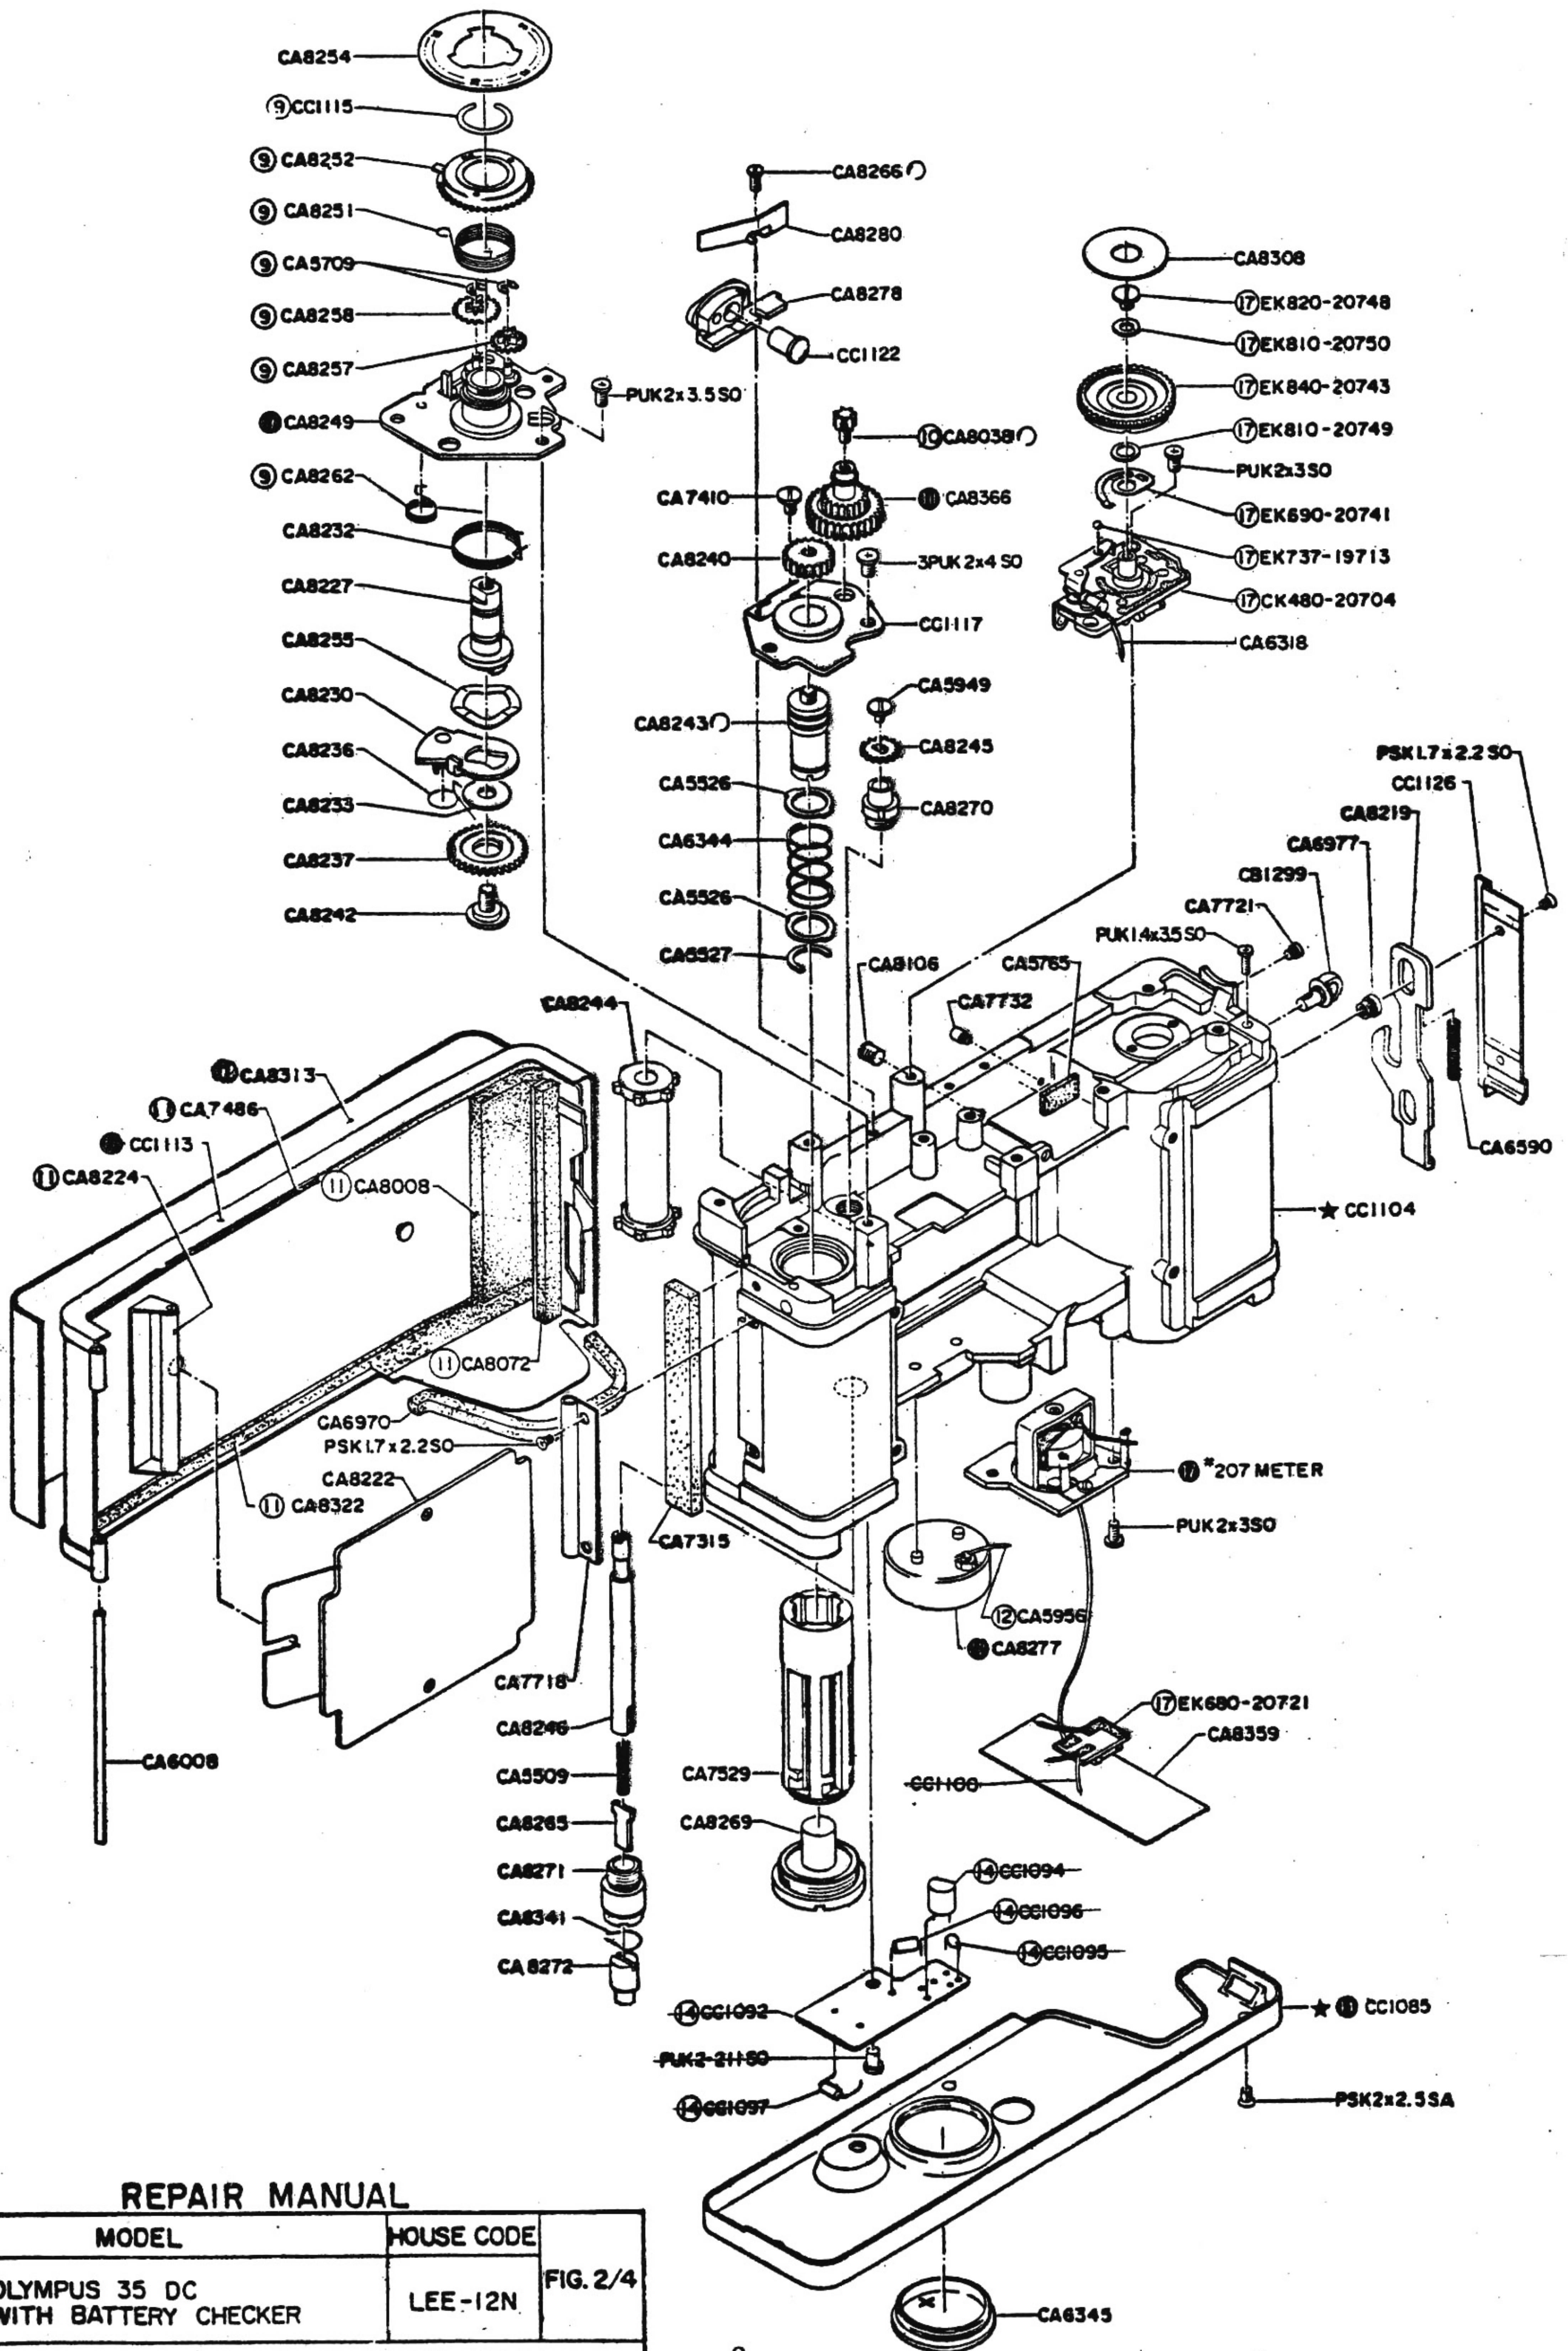

REPAIR MANUAL



MODEL	HOUSE CODE	FIG. 2/4
OLYMPUS 35 DC WITH BATTERY CHECKER	LEE-12N	
OLYMPUS OPTICAL CO., LTD. TOKYO, JAPAN		

NOTE: WHEN ORDERING FOR SPARE PARTS, PLEASE CLARIFY A MODEL, PARTS NUMBER AND QUANTITY

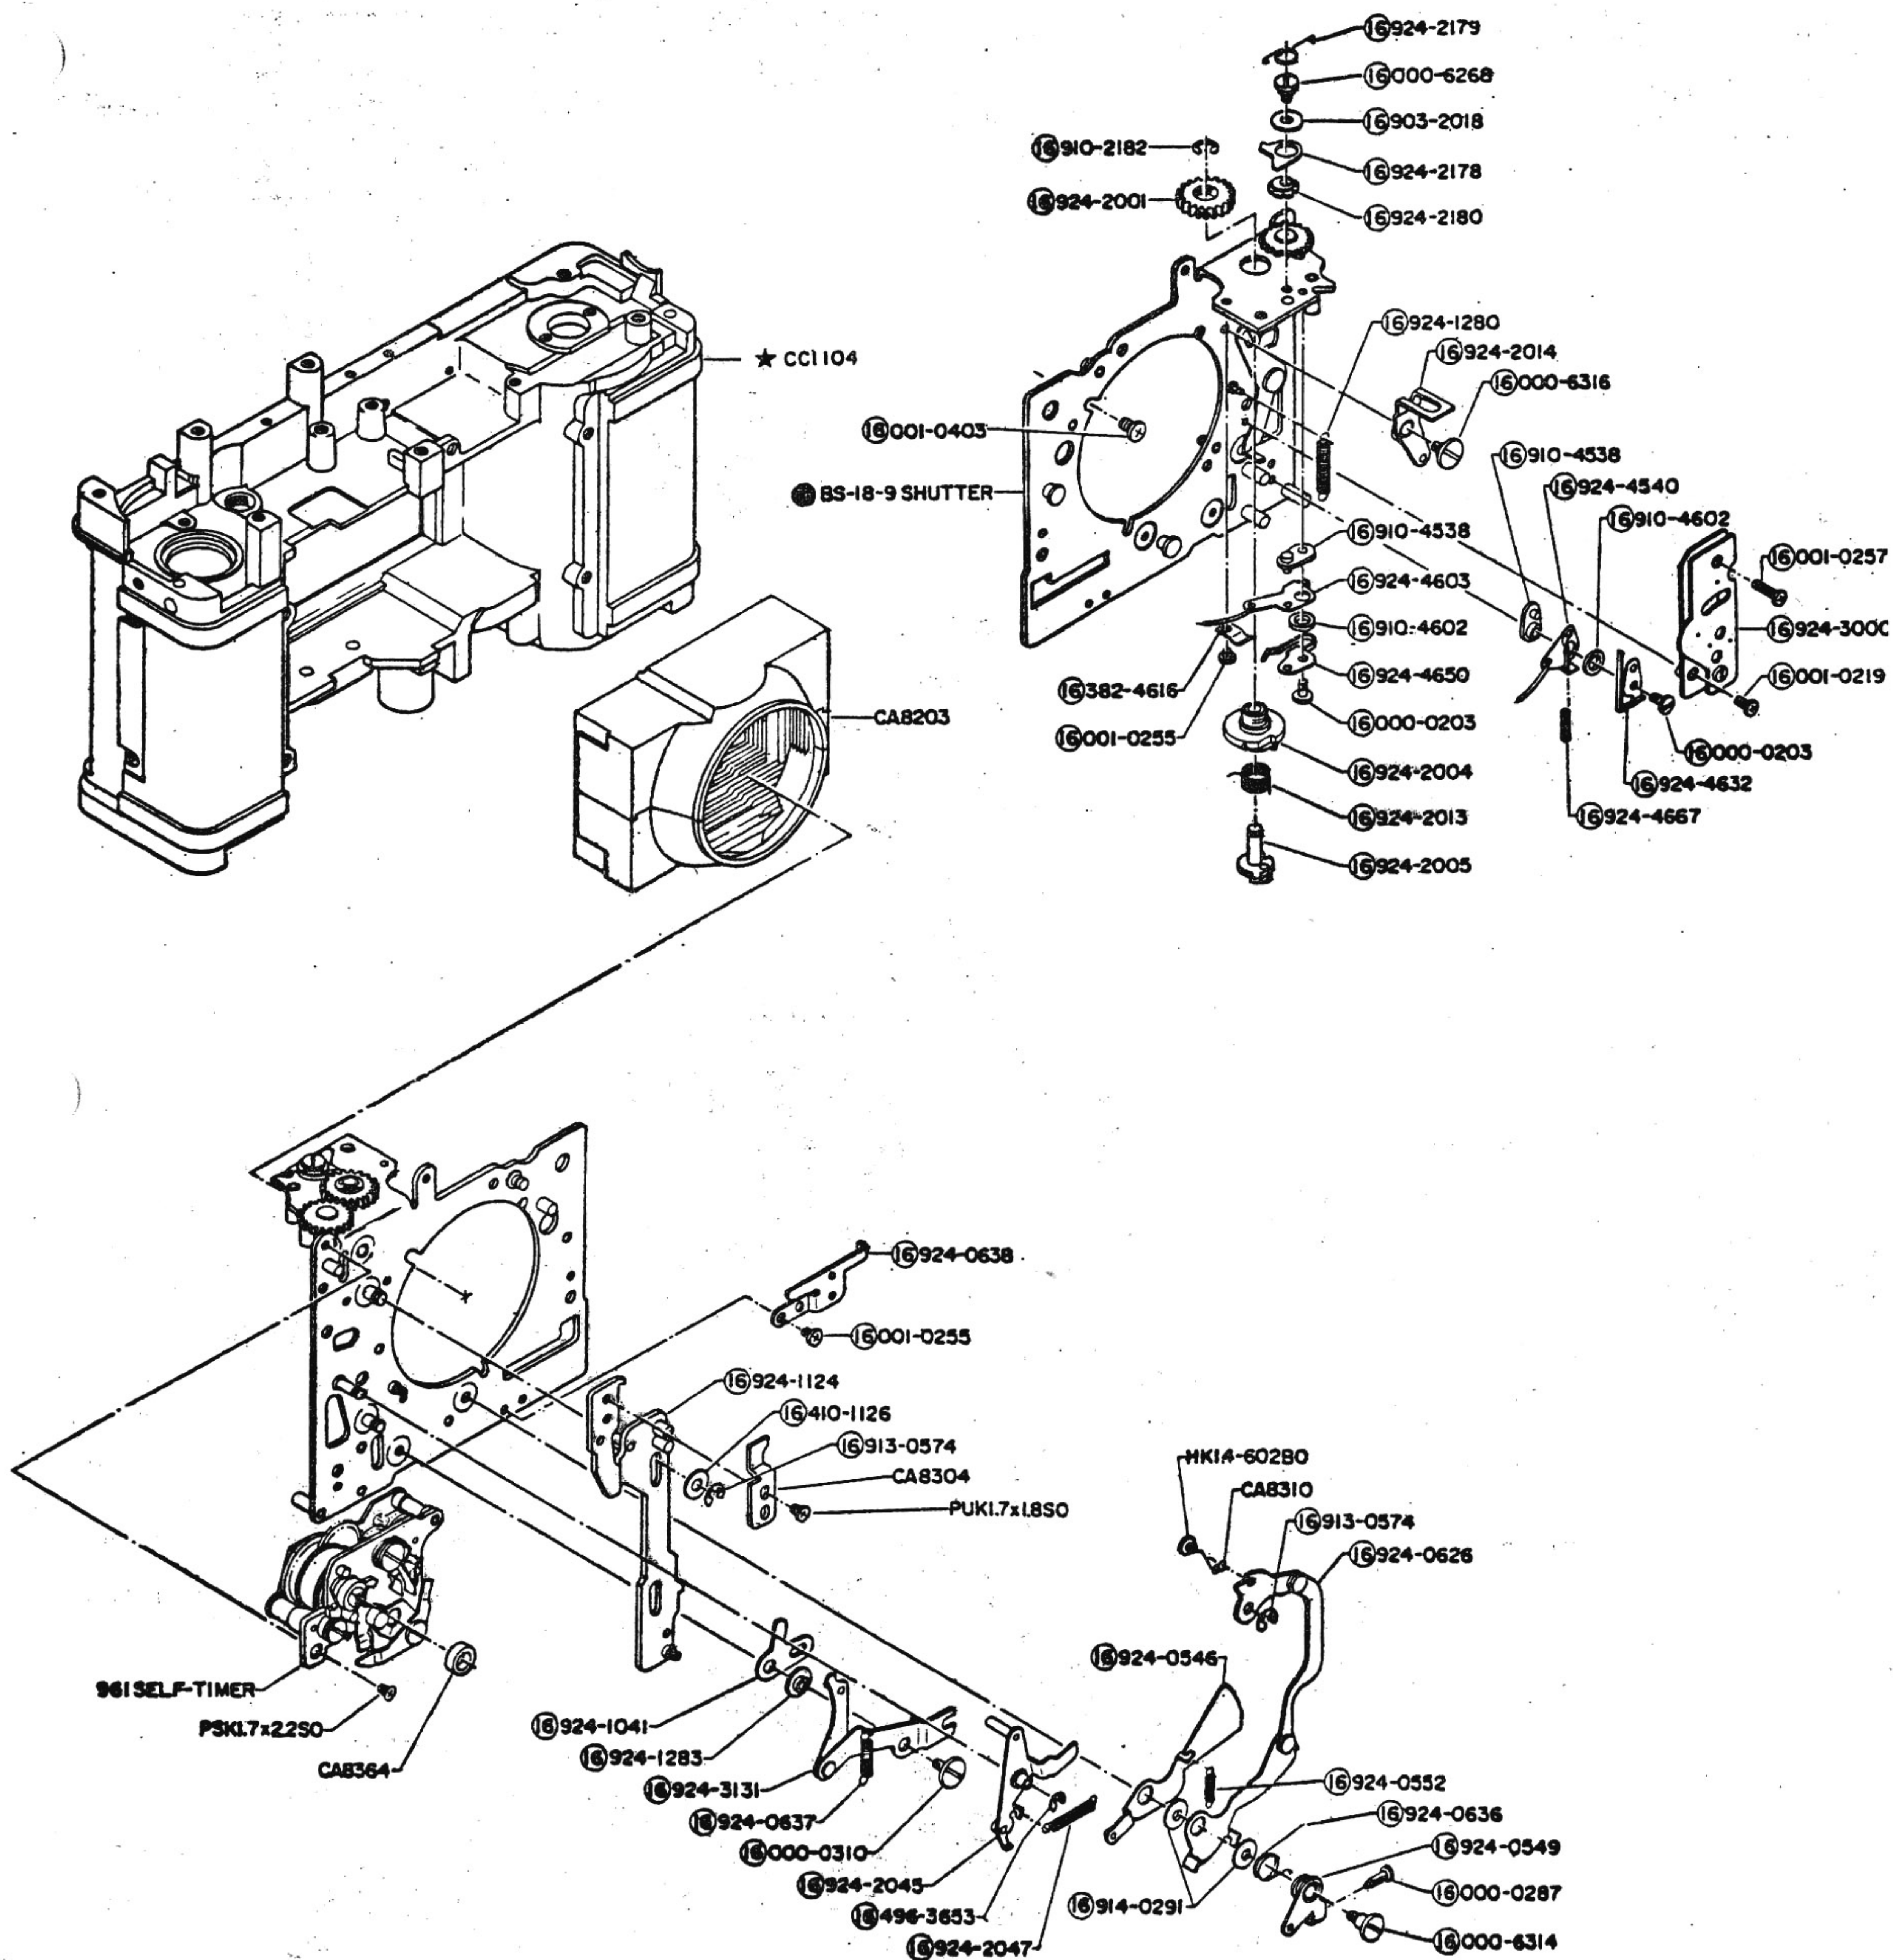

REPAIR MANUAL

MODEL		HOUSE CODE	FIG. 3/4
OLYMPUS 35 DC WITH BATTERY CHECKER		LEE-12N	
OLYMPUS OPTICAL CO., LTD. TOKYO, JAPAN			

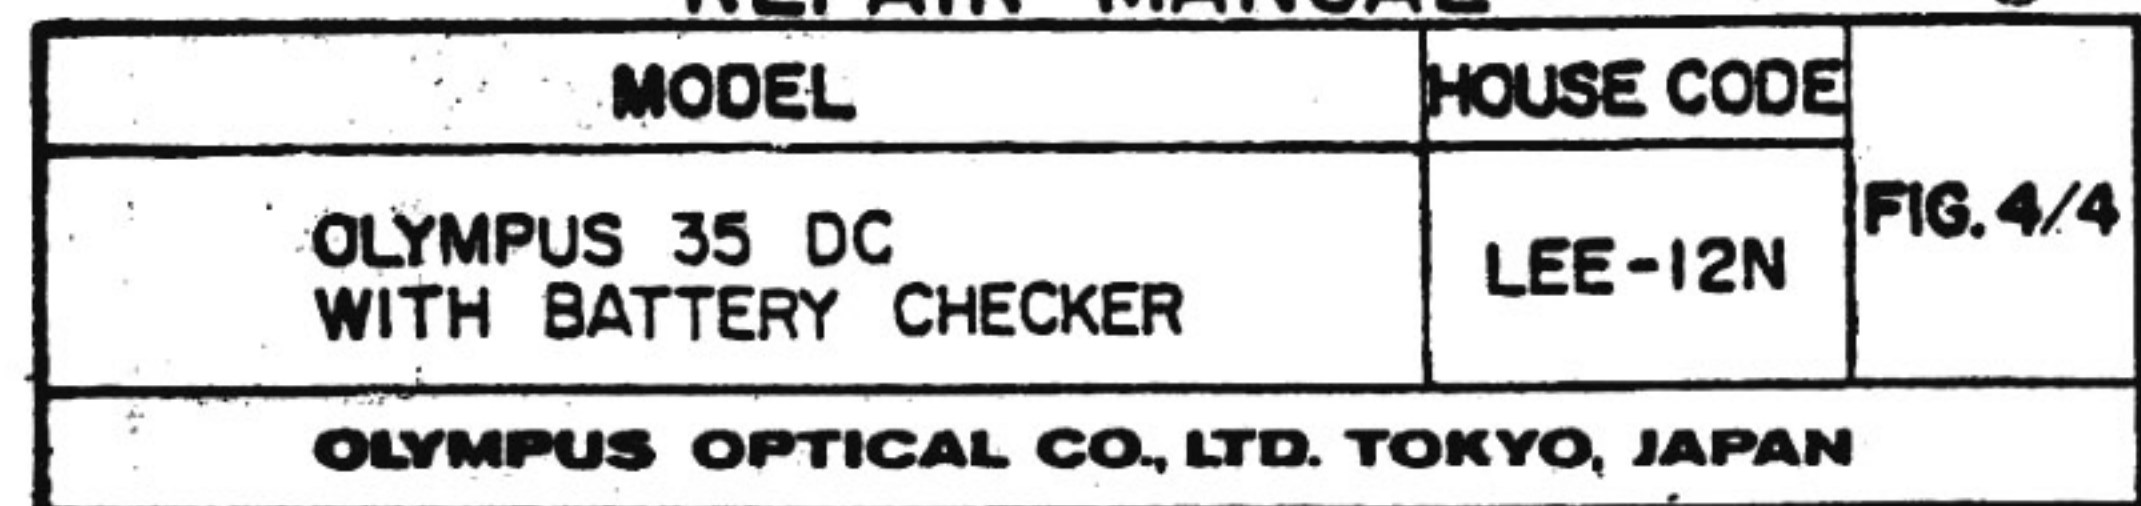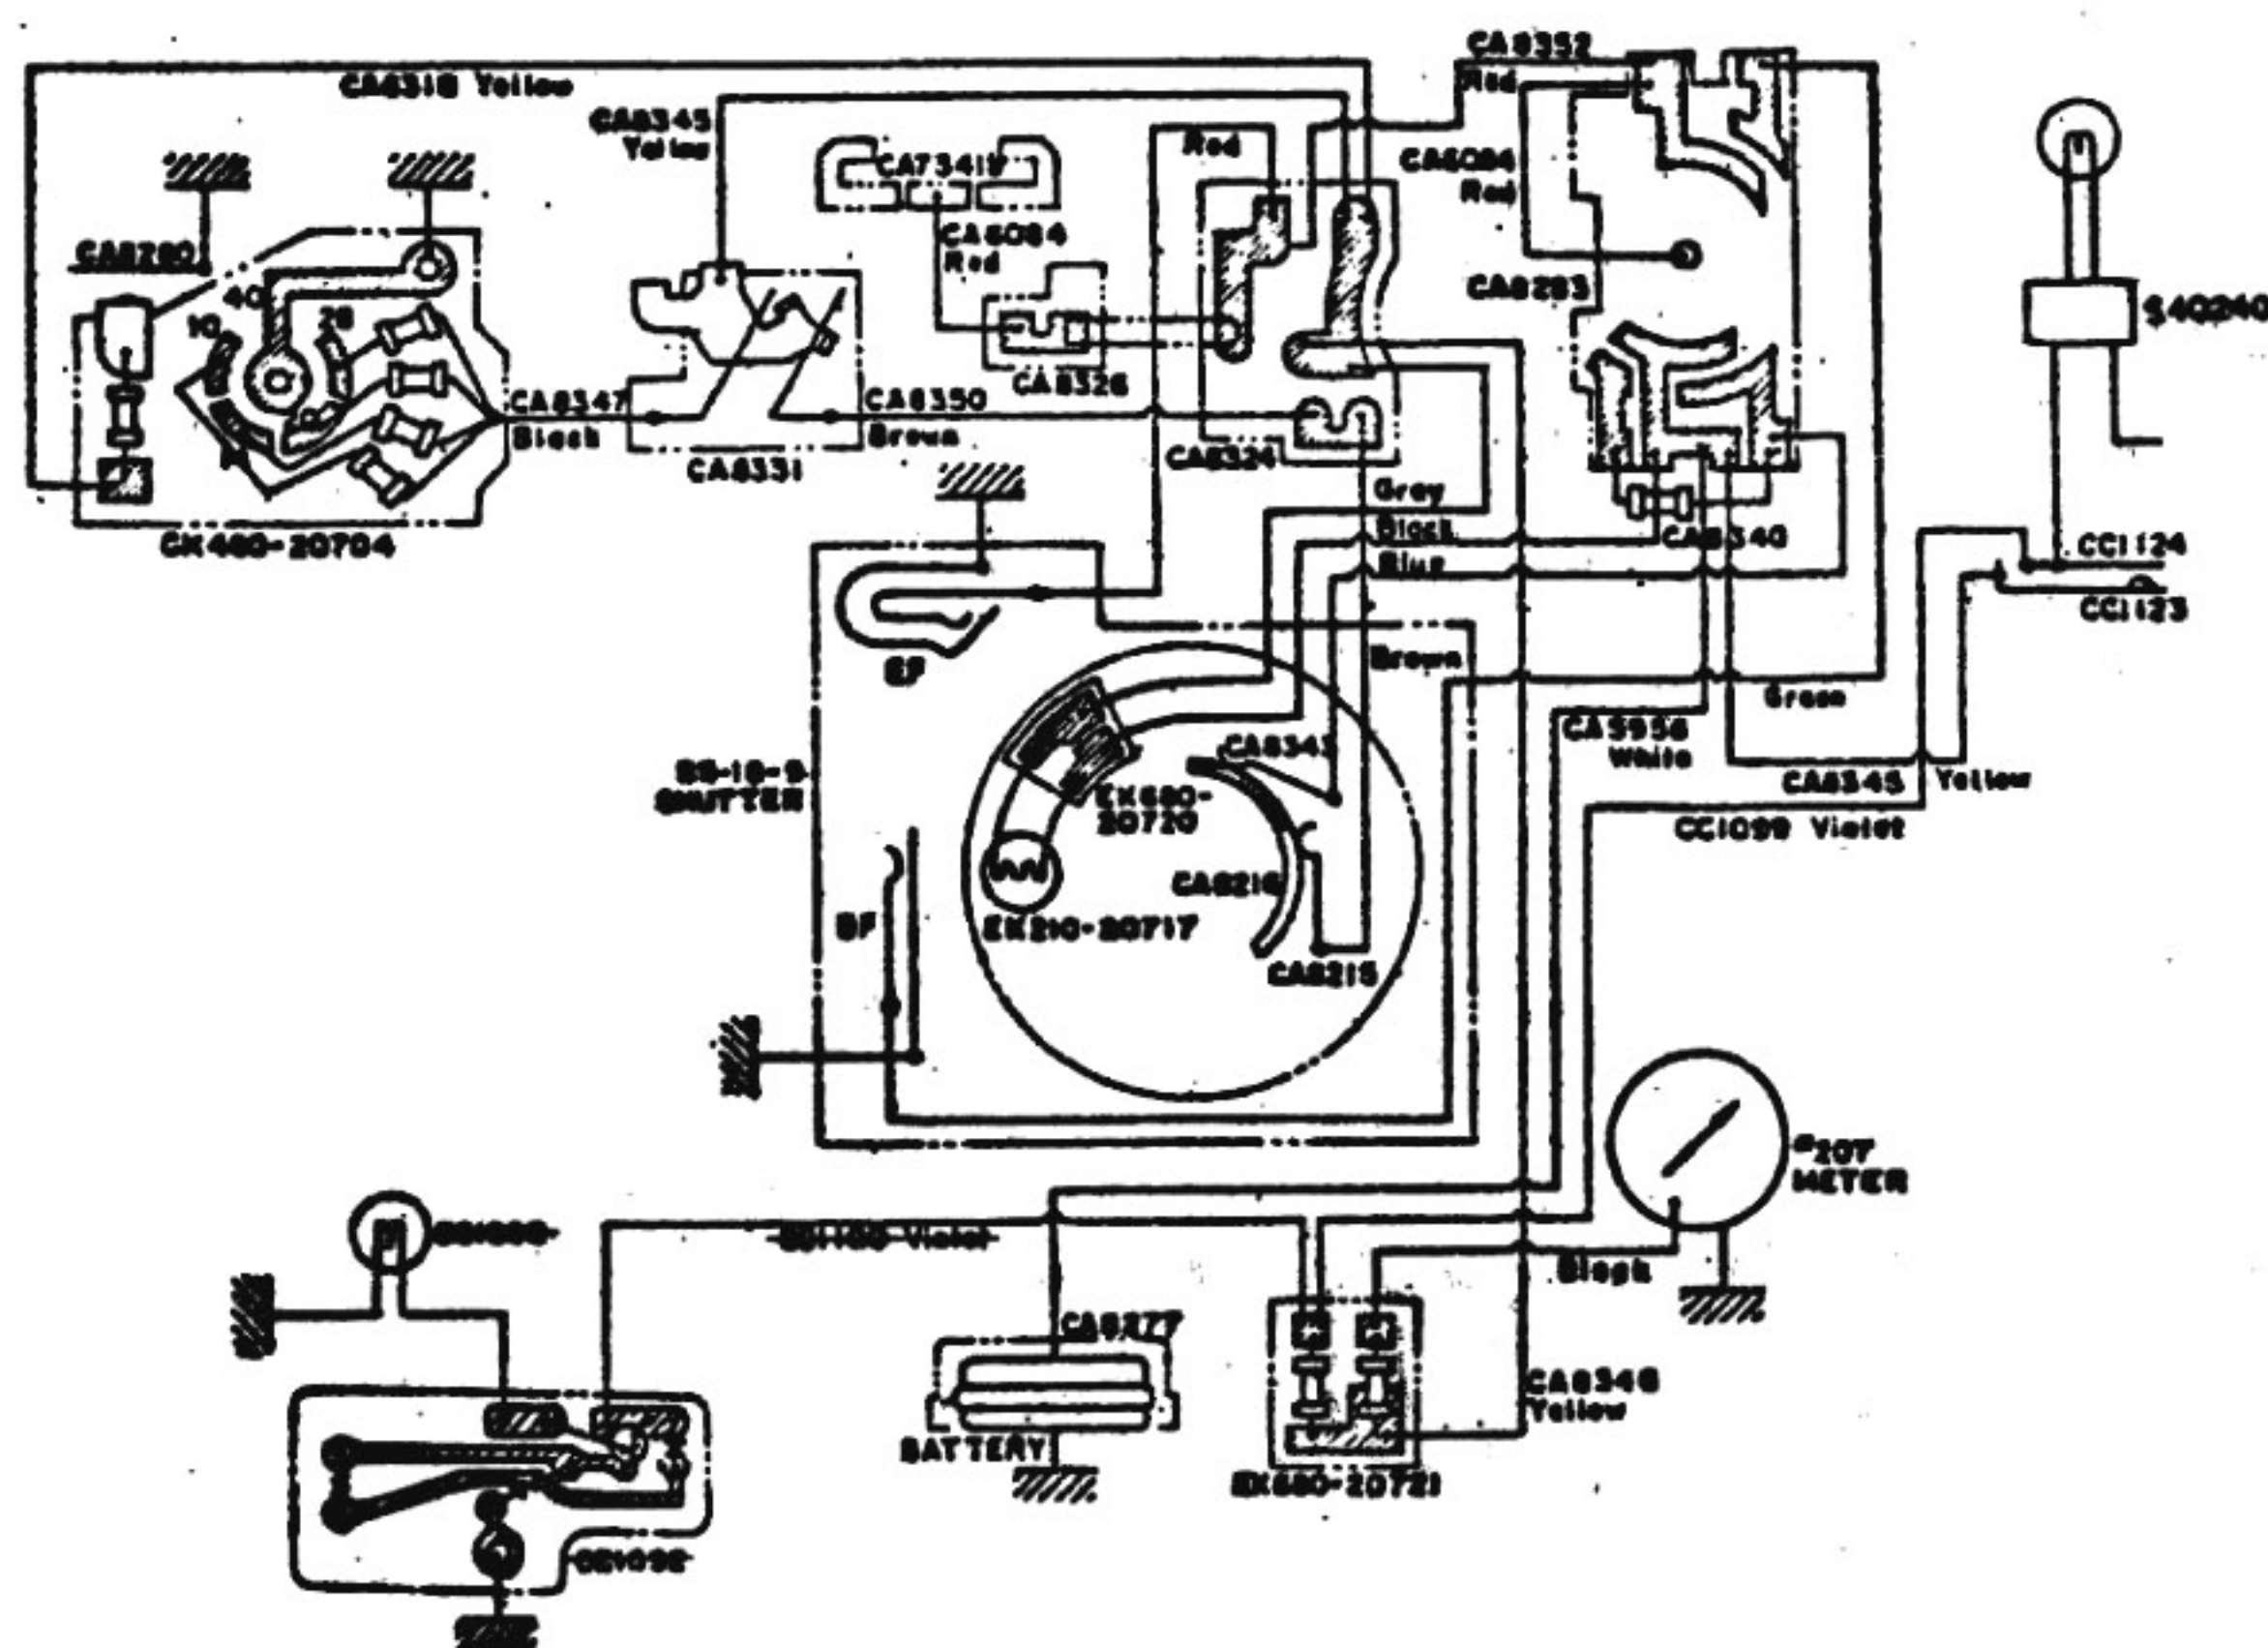

PARTS LIST

35DC

PARTS NO.	NAME OF PARTS	NOTE
CA 5509	CLUTCH SPRING	
5526	SPOOL HOLDER	
5527	C WASHER	
5709	E RING 3	
5767	COVERING PLATE	
5949	S GEAR SCREW	
5956	LEAD COIL	
6008	HINGE PIN	
6084	LEAD COIL C	
6344	SPOOL SPRING	
6345	BATTERY COMPARTMENT LID	
6590	KEY SPRING	
6970	LIGHT PROOF PADDING	
6977	KEY GUIDE	
7205	COIL HOLDER	
7315	LIGHT PROOF PADDING	
7329	STOPPER SPRING	
7334	R LEVER	3 parts 3 kinds
7336	R PINCH SHAFT	
7338	FRICITION SPRING	
7341b	SHOE CONTACT POINT	3 parts 3 kinds
7399	W LEVER COVER	
7410	RELEASE SCREW	
7469	M BASE SPRING	
7486	LIGHT PROOF PADDING	
7529	SPOOL A	
7559	R NUT	
7718	HINGE	
7721	STOPPER SCREW	
7732	FILM GUIDE PIN	
7921	STOPPER SCREW	
8008	P HOLDER	
8025	R SHAFT	
8038	SCREW GEAR	
8063	ST LEVER SCREW	
8072	LIGHT PROOF PADDING	
8099	LEVER NO.1	
8100	LEVER NO.1 SHAFT	
8102	M SPRING	
8103	AD SCREW	
8104	CONNECTING PIN	
8106	LIGHT PROOF SCREW	
8107	OB FRAME	
8109	VIEW FIELD STOPPER	
8110	MIRROR HOLDER	
8120	R SCREW	
8141	VIEW FINDER HOUSING	27 parts 26 kinds
8173	SET LEVER	
8203	LIGHT PROOF FRAME	2 parts 1 kind
8209	FOCUS RING	
8210	ASA RING	3 parts 3 kinds
8211	MOUNT RING	
8212	RING HOLDER	
8213	INSULATION RING SHAFT	

PARTS NO.	NAME OF PARTS	NOTE
CA 8214	INSULATION RING	10 parts 9 kinds
8215	R CONTACT POINT	
8218	FOCUS INDICATION RING	
8219	KEY PLATE A	3 parts 3 kinds
8222	PRESSURE PLATE	
8224	FILM ROLLER	
8225	FILM WINDING LEVER	2 parts 2 kinds
8227	FW SHAFT	
8228	FW LEVER COVER	
8230	FW PLATE	3 parts 3 kinds
8231	FW LEVER WASHER	
8232	FW SPRING	
8233	GEAR NO.1 WASHER	
8236	FW PLATE SPRING	
8237	GEAR NO.1	
8240	S GEAR	
8242	GEAR NO.1 SHAFT	
8243	S GEAR SHAFT	
8244	SPROCKET	2 parts 2 kinds
8245	S GEAR	
8246	SP SHAFT	
8249	FC BASE PLATE	18 parts 17 kinds
8251	FC SPRING	
8252	FC GEAR	
8254	FC PLATE	
8255	FRICTION RING	
8257	K IDLE 1	
8258	K IDLE 2	
8262	RETURNING SPRING 1	
8265	CLUTCH	
8266	S STOPPER SCREW	
8268	FC WINDOW	
8269	S LOWER HOLDER	
8270	SP UPPER HOLDER	
8271	SP LOWER HOLDER	
8272	R BUTTON	
8273	R SHAFT HOLDER	
8274	GN WINDOW	
8276	SHOE SPRING	
8277	BATTERY CASE	5 parts 5 kinds
8278	BUTTON FRAME	
8280	S CONTACT 2	
8283	MX BASE PLATE	25 parts 21 kinds
8290	MX CLICK	
8293	MX PLATE	
8304	STOPPER LEVER	
8306	BUTTON WASHER	
8308	GN PLATE	
8309	FOCUS PIN	
8310	FINDER NEEDLE	
8311	RIGHT SIDE LEATHER	
8312	LEFT SIDE LEATHER	
8313	REAR COVER LEATHER	
8316	INSURATION RING SHAFT	

PARTS LIST

35DC

PARTS NO.	NAME OF PARTS	NOTE
CA 8318	FOCUS PLATE	5 parts 4 kinds
8319	R RING	
8322	LIGHT PROOF PADDING	
8323	M LEVER	
8324	F BASE PLATE	4 parts 3 kinds
8325	F COVER	
8326	SHOE BASE PLATE	
8327	S CONTACT POINT	
8329	FRAME STOPPER	18 parts 16 kinds
8331	FM BASE PLATE	
8338	LEVER SPRING	
8340	M RESISTOR	
8341	BUTTON SPRING	2 parts 2 kinds
8343	R SLIDER	
8345	LEAD COIL	
8346	LEAD COIL	
8347	LEAD COIL	45mm long, Yellow
8350	LEAD COIL	165mm long, Yellow
8352	LEAD COIL	25mm long, Black
8355	SPRING NO. 1	55mm long, Brown
8356	HOOK	45mm long, Red
8358	STOPPER SCREW	3 parts 3 kinds
8359	TAPE	
8360	F TAPE	
8363	MIRROR SCREW	
8364	SET WASHER	4 parts 4 kinds
8366	GEAR NO.2	
8368	FM SWITCH	
CB 1299	STRAP RING	
CC 1037	SHOE	8 parts 8 kinds
1051	OBJECTIVE FRAME	
1058	BOTTOM PLATE	
1086	EYE PIECE FRAME	
1089	INSULATION PLATE 1	3 parts 3 kinds
1090	INSULATION PLATE 2	
1091	BC BUTTON	
1092	BASE PLATE	
1093	L HOLDER	5 parts 5 kinds
1094	TRANSISTOR	
1095	VARISTOR	
1096	RESISTOR 1	
1098	LAMP	165mm long, Violet
1099	LEAD COIL	
1100	LEAD COIL	
1101	LEAD COIL	
1102	TUBE	40mm long, Violet
1104	(CAMERA BODY)	185mm long, Green
1111	MARK	Not available
1113	REAR COVER	12 parts 11 kinds
1115	C RING	
1117	FILM WINDING BASE PLATE	
1120	R KNOB	
1084	Top cover	8 parts 8 kinds

PARTS NO.	NAME OF PARTS	NOTE
CC 1121	BUTTON	2 parts 2 kinds
1122	S BUTTON	
1123	CONTACT POINT A	
1124	CONTACT POINT B	
1126	KEY COVER	
1127	R PINCH	
LC 4051	OBJECTIVE NO.1	3 parts 3 kinds
4052	HALF MIRROR	
4053	EYE PIECE LENS	
4056	MIRROR NO.1	
4057	COVERING GLASS	
4068	VIEW FIELD MASK	
4075	MIRROR NO.2	
4076	MAGNIFIER	
OLX 41-01	FRONT LENS HOLDER	3 parts 3 kinds
41-02	INNER LENS BARREL	
41-03	REAR LENS BARREL	
41-04	REAR LENS HOLDER	
41-G1	FRONT LENS	
BS-18-19	SHUTTER ASS'Y	
NO.953	SELF TIMER ASS'Y	
NO.207	EXPOSURE METER ASS'Y	
	SET SCREW, WASHER, BAIL	
PUK	1.4 x 2 SO	
	1.4 x 2.5 SO	
	1.4 - 333 SO	
	1.4 - 404 SO	
	1.7 x 1.8 SO	
	1.7 x 2 SO	
	1.7 x 2.2 SO	
	1.7 x 2.5 SO	
	1.7 x 3 BA	
	1.7 - 308 SO	
	1.7 - 615 SO	
	2 x 2.5 SO	
	2 x 3 SO	
	2 x 3.5 SO	
	2 - 211 SO	
PSK	1.4 x 2 SO	
	1.4 x 2.5 SO	
	1.4 x 3 SO	
	1.7 x 2.2 SO	
	2 x 2.5 SA	
	2 x 3 SO	
	2 x 4 SO	

PARTS LIST

35DC

PARTS NO.	NAME OF PARTS	NOTE
	3PUK 2 x 3 SO	
	2 x 4 SO	
	HK 2 - 338 .BB	
	NW 6.1 - 392 BO	
	NU 1.7 - 2 UB	
	B 1/16	